

ERGC_{TECH} Barrier Nets and Screens RDA





BARRIER NET / SCREEN

to be fitted to the backseats headrests

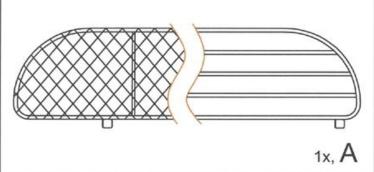

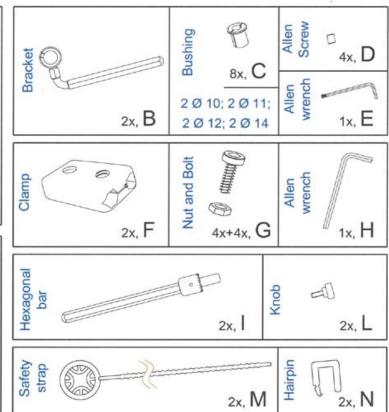


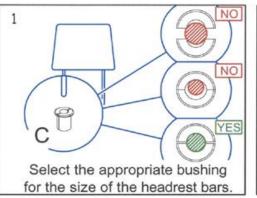


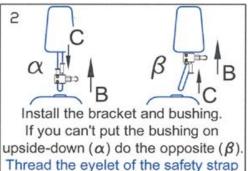

to one of the free headrest bars.


Tighten gently the allen screw "D" with the Allen wrench "E". In very large cars use the internal headrest bars. In this case remove the brackets when not in use.

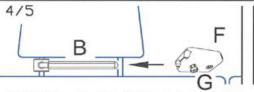


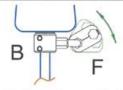

Install the clamps in the bracket at the most convenient angle, so that they are at the right distance from the headrests and do not interfere with the car trunk cover. Instal the screws and the bolts

from the easiest position available. Don't tighten them, at this time!

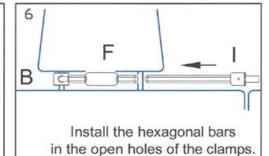

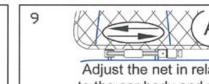

7/8 Install the barrier net, choose the best angle, tighten the knobs "L".

Adjust the net in relation to the car body and move the clamps in a central position in relation to the headrests.

